



How to export your file as an .STL for 3D printing

The 3D printer uses .STL file format. The following file was designed in Rhino 3D .3dm
Steps will vary depending on your software.

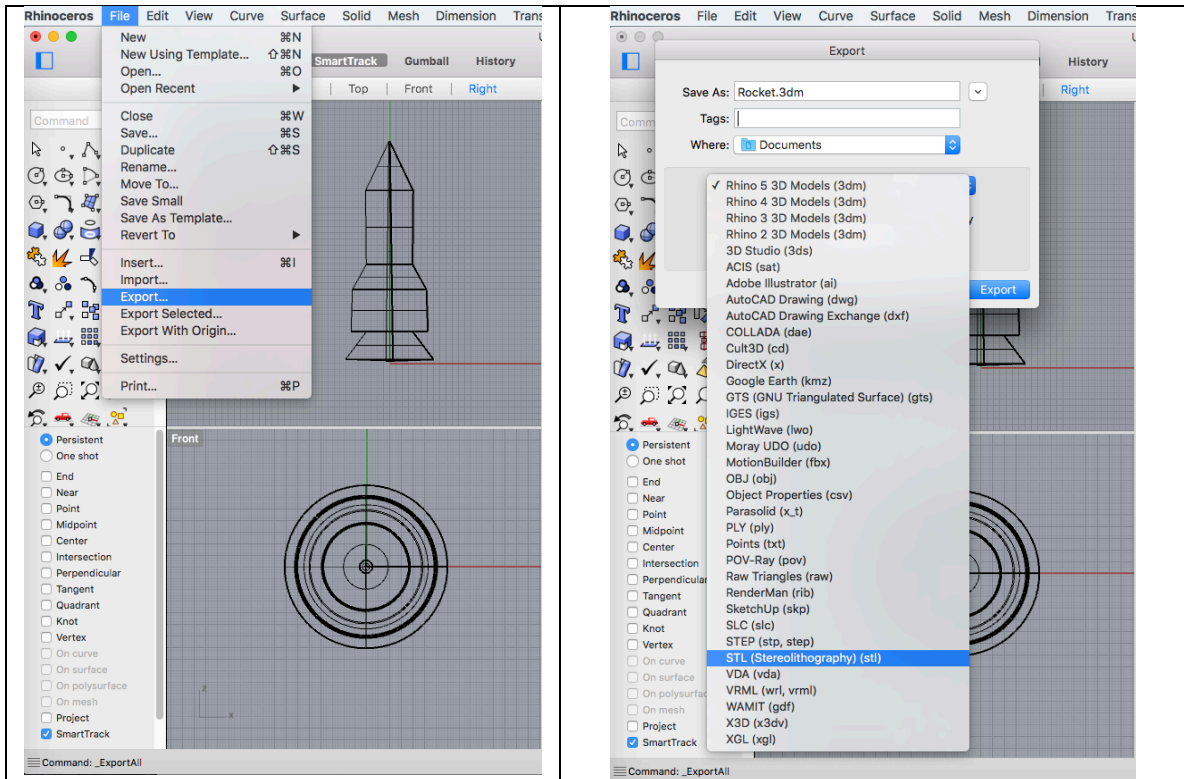


1. Go to file and then export.

2. Select the file type dropdown menu and change the file type to **STL (Stereolithography)**

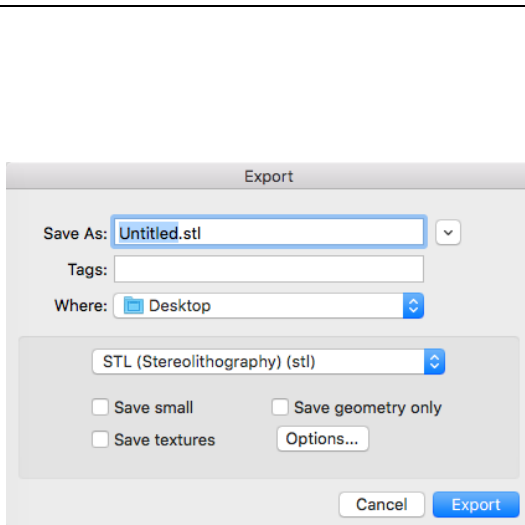

3. The export dialog box pops up. Select a file name and location

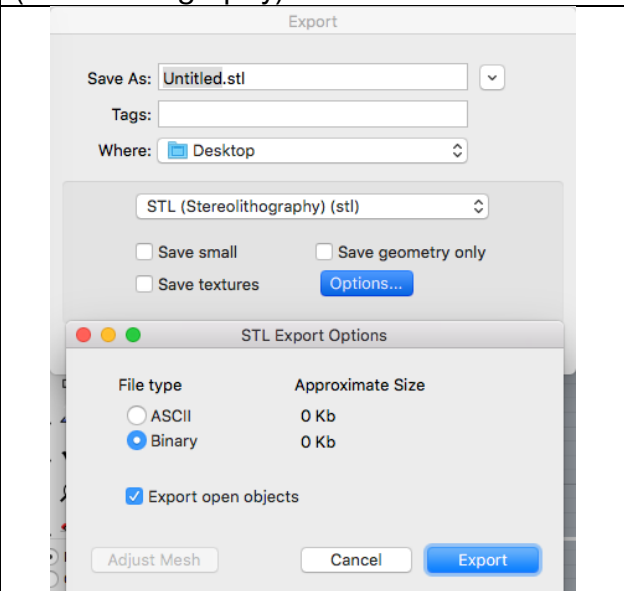

4. Make sure Binary option is checked then click export.